

Marine Self-Contained & Split System Reverse Cycle Air Conditioners Models 05-07-10-12-16-18-24

General Description

Marvair's water source self-contained and split system reverse cycle air conditioners are designed for use in either fresh or salt water. These units are built in capacities of 5,000; 7,000; 10,000; 12,000; 16,000; 18,000 and 24,000 BTUH. The self-contained units are complete packaged units, factory charged and wired. The split systems are comprised of two parts, a condensing section comprised of the compressor section and the air handler

section. Field installed refrigerant tubing and wiring connects the two sections.

Units are available for operation on 115V, 60 Hz;

208/230V, 60 Hz and 220/240V, 50 Hz. The units are built using R410A refrigerant. R410A is environmentally friendly, nonozone depleting and accepted for use throughout the European Community.

The reverse cycle air conditioners

feature rotary and scroll compressors with a suction line accumulator and high and low refrigerant pressure switches. The coaxial tube-in-tube condenser is constructed of corrosion resistant cupronickel water tubing and copper refrigerant tubing.

To ensure years of dependable performance, the units feature:

- A stainless steel base pan with multiple condensate drain openings allows the rapid disposal of condensate. The base pan is embossed to add rigidity and to keep the components out of the condensate. An insulated pad minimizes movement and sound. On the split systems, the compressor section and the air handler are mounted in a stainless steel trays.
- Structural supports and control box constructed of superior corrosion resistant aluminum. The aluminum is primed and then a white heat cured polyester finish is applied for the optimum in durability and aesthetics.
- A five foot long (151 cm), heavy duty multiwire cable harness facilitates the remote mounting of the control box. This complete cable assembly seals all the wires into the harness to minimize the chance of corrosion.
- The evaporator coil is constructed of lanced fins and rifled copper tubing for optimum heat transfer. The coil has a baked polyester enamel finish no paint and is rated to 1,000 hours when tested to ASTM B117.
- A compact, motorized impeller type blower moves the conditioned air quietly and efficiently through duct work. Backward curved, corrosion resistant centrifugal fans feature extremely long blades for high efficiency and low noise. Maintenance free ball bearings never need oiling.

All units are built to the requirements of UL standard 484, 7th Edition. Marvair[®] is an ISO 9001-2000 registered company. All self contained and split systems units (unless designated otherwise) meet applicable ABYC and US Coast Guard regulations, CE directives and all applicable Air Conditioning and Refrigeration Institute standards.



SAB16RCB-00





Installation

Installation on both self contained and split system units is simplified with a readily accessible terminal strip for both the power and control (low voltage) wiring. The control box is located on the side of the self contained units and in the compressor section of the split systems. However, the control box can be easily mounted on the opposite side or on the top of the unit or even remotely mounted on a bulkhead. A five foot (151 cm) multiwire cable harness provides a durable and quick electrical connection between the unit and the control box. Condensate line ports (5/8" nylon tube) on both ends and both sides of the base pan facilitate the drain line connections. Factory provided hold-down clamps are included. On the split system units, the compressor section is shipped with a holding charge and, in many cases, no additional refrigerant is required.

Thermostats


All units can be controlled by either the o-LED or the MachAir I thermostat/controller. The o-LED and the MachAir I thermostat/controller display shows whether the unit is in the heating or cooling or fan only or dehumidification mode, set point temperature (°F or °C), cabin temperature (°F or °C) and fan indicator. The cooling or heating can be selected manually or the Auto mode selects whichever is required automatically. The fan speed can be controlled automatically or manually. Includes wall mounted controller/display. See the o-LED Product Data Sheet for complete information on the o-LED thermostat/controller.

Accessories

Accessories are required and ordered separately.

- Sea Water Pump Kit.
- Air duct, supply grille(s) and return grille.
- Plumbing fittings.
- Thermostat/controller.

Model Identification - Self-Contained Units

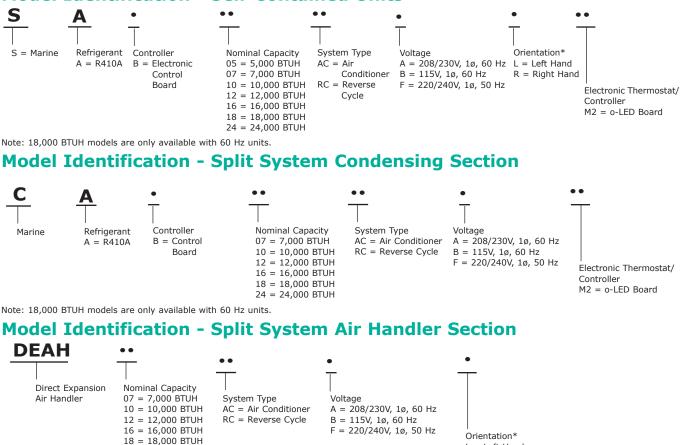

* When looking at the compressor from the end of the unit, if the coil is on your right side, the unit is a right handed unit. If the coil is on your left, it is a left handed unit.

L = Left Hand

R = Right Hand

24 = 24,000 BTUH

Water Flow Chart

Minimum Wate	Minimum Water Flow* for Reverse Cycle Systems							
Model (BTUH)	Minimum Water Flow at the Unit							
5,000	1.4 GPM / 5.3 LPM							
7,000	2.0 GPM / 7.6 LPM							
10,000	2.9 GPM / 11.0 LPM							
12,000	3.5 GPM / 13.3 LPM							
16,000	4.7 GPM / 17.8 LPM							
18,000	5.25 GPM / 19.9 LPM							
24,000 7.0 GPM / 26.5 LPM								
* Based upon 85°F (29.5°C) inle	et water measured at the inlet of the unit.							

Air Flow and Grille Chart

Self Contained Unit or Air Handler	Nominal Air Flow CFM/m ³ per Hour	Minimum Opening for Return Air Grille (in ² /cm ²)	Minimum Opening for Supply Air Grille(s) (in ² /cm ²)	Minimum Hose Size (in/cm)	Marvair P/N for Blower to Hose Adapters	Outside Diameter of Hose Adapter (in/cm)
5,000	150/255	64/415	32/210	4/10.2	Not required. Blower has 4" (10.2cm) round diameter opening.	Not required. Blower has 4" (10.2cm) round diameter opening.
7,000	250/425	100/645	40/260	5/12.7	901341 (5" round hose adapter)	4-3/4" (12cm)
10,000	300/510	100/645	60/390	5 or 6*/ 12.7 or 15.2*	90134 (5" round hose adapter) or 90135 ¹ (6" round hose adapter)	4-3/4" (12 cm) or 5-3/4" (14.6 cm)
12,000	360/612	140/900	70/450	6/15.2	90135 ¹ (6" round hose adapter)	5-3/4" (14.6 cm)
16,000	385/654	168/1,110	84/540	6 or 7*/ 15.2 or 17.8*	90135 (6" round hose adapter) or 90136 ¹ (7" round hose adapter)	5-3/4" (14.6 cm) or 6-3/4" (17.15cm)
18,000	420/714	168/1,110	84/540	7/17.8*	90136 ¹ (7" round hose adapter)	6-3/4" (17.15cm)
24,000	700/1,190	240/1,550	192/1,240	8* or 10/ 20.3* or 25.4	90568 ² (8" oval hose adapter)	10" x 4" (25.4 x 10.2 cm)

¹Shipped standard with unit.

²Two adapters are shipped with each two ton unit.

Performance/Electrical Data for Self-Contained Units - Models SAB, (115V, 60 Hz, R-410A Refrigerant)

Basic Model	Nominal Capacity (BTUH)	Voltage (VAC)	Freq. (Hz.)	Run Amps Cooling ¹	Unit Starting Amps ¹	MCA ²	Maximum Fuse/ Breaker Size		
SAB05RCB	5,000	115	60	4.56	16.0	7.6	10		
SAB07RCB	7,000	115	60	6.11	21.4	10.2	15		
SAB10RCB	10,000	115	60	7.15	25.0	12.2	20		
SAB12RCB	12,000	115	60	11.06	38.7	13.5	20		
SAB16RCB	16,000	115	60	11.67	40.8	14.1	20		
SAB18RCB	18,000	115	60	TBD	TBD	TBD	TBD		
approximatel	¹ Amps will vary with actual voltage, inlet water temperature and inlet air temperature. Amps may be approximately 50% higher in the heating mode								
² MCA = Minin	num Circuit A	mpacity (W	ire Size Ar	nps)					

Performance/Electrical Data for Self-Contained Units - Models SAB, (208/230V, 60 Hz, R-410A Refrigerant)

Basic	Nominal Capacity	Voltage	Freq.	Dhasa	Run Amps	Unit Starting	MCA ²	Maximum Fuse/
Model	(BTUH)	(VAC)	(Hz.)	Phase	Cooling ¹	Amps ¹	MCA ²	Breaker Size
SAB05RCA	5,000	208/230	60	1	2.20	7.70	4.3	10
SAB07RCA	7,000	208/230	60	1	2.91	10.2	5.1	10
SAB10RCA	10,000	208/230	60	1	3.42	12.0	6.0	10
SAB12RCA	12,000	208/230	60	1	5.24	18.3	6.9	10
SAB16RCA	16,000	208/230	60	1	4.94	17.3	8.7	15
SAB18RCA	18,000	208/230	60	1	TBD	TBD	TBD	TBD
SAB24RCA	24,000	208/230	60	1	6.96	24.4	17.7	30
¹ Amps will va approximatel					ature and i	nlet air tem	perature.	Amps may be


²MCA = Minimum Circuit Ampacity (Wire Size Amps)

Performance/Electrical Data for Self-Contained Units - Models SAB, (220/240V, 50 Hz, R-410A Refrigerant)

Basic Model	Nominal Capacity (BTUH)	Voltage (VAC)	Freq. (Hz.)	Phase	Run Amps Cooling ¹	Unit Starting Amps ¹	MCA ²	Maximum Fuse/ Breaker Size
SAB05RCF	5,000	220/240	50	1	2.45	8.60	4.8	10
SAB07RCF	7,000	220/240	50	1	2.83	9.90	5.2	10
SAB10RCF	10,000	220/240	50	1	3.37	11.8	5.4	10
SAB12RCF	12,000	220/240	50	1	TBD	TBD	TBD	TBD
SAB16RCF	16,000	220/240	50	1	TBD	TBD	TBD	TBD
SAB24RCF	24,000	220/240	50	1	8.26	28.9	16.5	25
		,						-

¹Amps will vary with actual voltage, inlet water temperature and inlet air temperature. Amps may be approximately 50% higher in the heating mode


²MCA = Minimum Circuit Ampacity (Wire Size Amps)

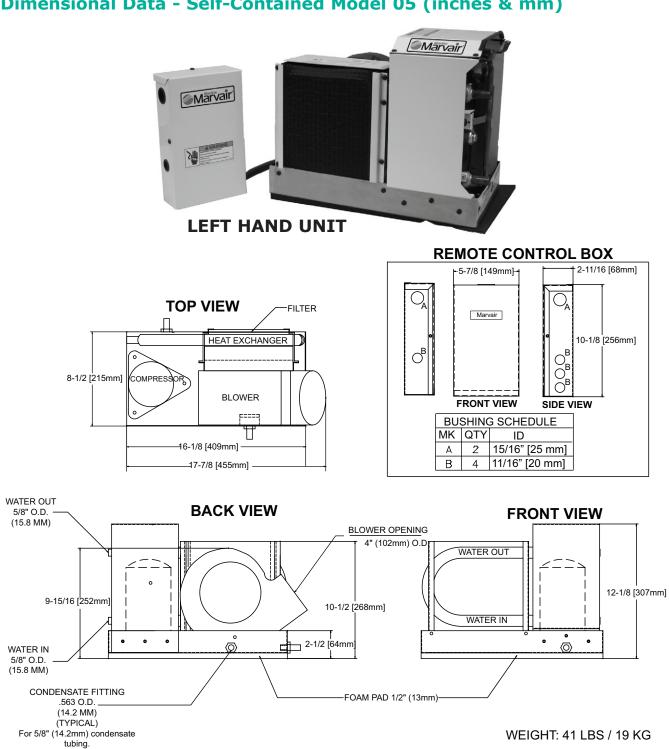


Dimensional Data - Self-Contained Model 05 (inches & mm)

NOTE: THE ELECTRICAL CONTROL BOX FOR ALL 5,000 MODELS IS ALWAYS REMOTELY MOUNTED.

Dimensional Data - Self-Contained Models 07-10-12-16-18 (inches & mm)

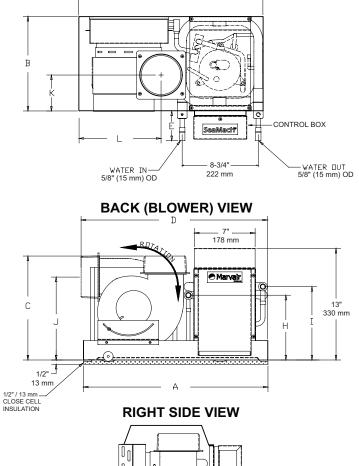



TOP VIEW BLOWER IN POSITION FOR VERTICAL DISCHARGE

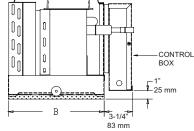




RIGHT HAND UNIT

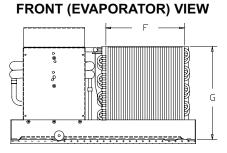

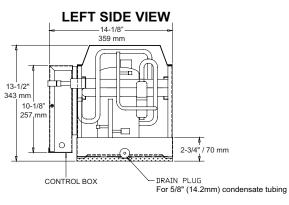

DIMS	SAB07RC*	SAB10RC*	SAB12RC*	SAB16RC*	SAB18RC*
Α	21-1/4" (540mm)	22-7/8" (581mm)	22-7/8" (581mm)	23-3/4" (603mm)	
В	11" (279mm)	11" (279mm)	11" (279mm)	11" (279mm)	11" (279mm)
C	12-1/4" (311mm)	13-5/8" (346mm)	13-7/8" (352mm)	13-5/8" (346mm)	13-5/8" (346mm)
D	22-3/8" (568mm)	24-1/2" (622mm)	24-3/4" (629mm)	25-3/4" (654mm)	25-3/4" (654mm)
E	3-1/2" (89mm)	3-3/8" (86mm)	3-3/8" (86mm)	3-3/8" (86mm)	3-3/8" (86mm)
F	9-1/8" (232mm)	11" (279mm)	11" (279mm)	11-1/2" (292mm)	11-1/2" (292mm)
G	10-7/8" (276mm)	13" (330mm)	13" (330mm)	13-1/8" (333mm)	13-1/8" (333mm)
H	7-1/2" (191mm)	7" (178mm)	7" (178mm)	6-3/4" (171mm)	6-3/4" (171mm)
I	9" (229mm)	9-3/4" (248mm)	9-3/4" (248mm)	9-3/8" (238mm)	9-3/8" (238mm)
J	10" (254mm)	10-3/4" (273mm)	10-3/4" (273mm)	10-1/2" (267mm)	10-1/2" (267mm)
K	4" (102mm)	3-1/2" (89mm)	3-1/2" (89mm)	3-1/2" (89mm)	3-1/2" (89mm)
L	9" (229mm)	10-3/8" (264mm)	10-3/8" (264mm)	10-1/8" (257mm)	10-1/8" (257mm)
WT.	55 Lbs (25 kg)	63 Lbs (29 kg)	66 Lbs (30 kg)	67 Lbs (30 kjg)	68 Lbs (31 kg)
Control	Box Dimensions - 11	x 3-1/2 x 6-1/4" (279	x 79 x 159mm)		

Dimensional Data - Self-Contained Model 24 (inches & mm)

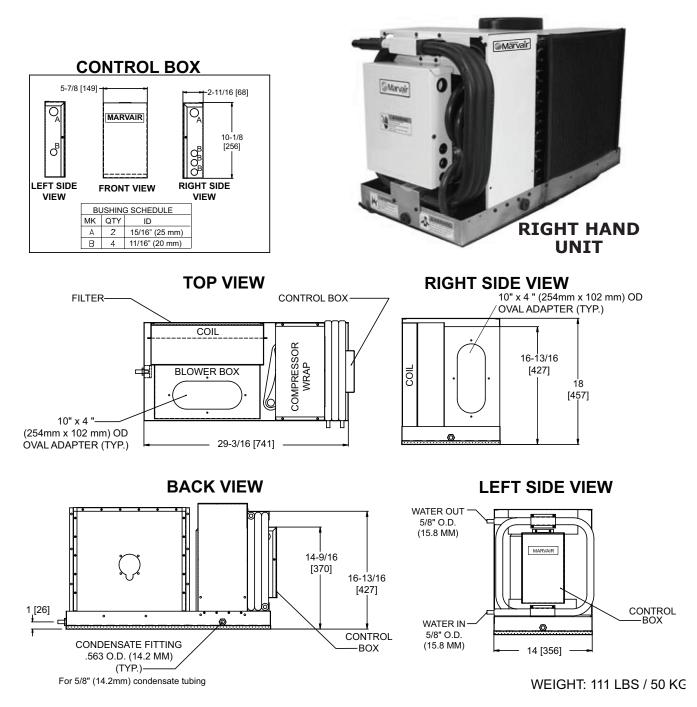

There are two conditioned air outlet openings, one on the top and one on the right side. Each opening is a 9-7/8" x 4" (251mm x 102mm) oval opening. An oval adapter, Marvair part number 91568, should be used as a transition to duct on each opening. This adapter has an outside diameter of 10" x 4" (254 mm x 102 mm). For optimum performance, both openings must be used. Insufficient air flow can cause ice to form on the evaporator coil in the cooling mode and premature activation of the circuit breaker in the heating mode.

Performance/Electrical Data for Split System Condensing Section Models CAB, (115V, 60 Hz, R-410A Refrigerant)

Basic Model	Nominal Capacity (BTUH)	Voltage (VAC)	Freq. (Hz.)	Run Amps Cooling ¹	Unit Starting Amps ¹	MCA ²	Maximum Fuse/ Breaker Size
CAB05RCB	5,000	115	60	4.56	16.0	7.6	10
CAB07RCB	7,000	115	60	6.11	21.4	10.2	15
CAB10RCB	10,000	115	60	7.15	25.0	12.2	20
CAB12RCB	12,000	115	60	11.06	38.7	13.5	20
CAB16RCB	16,000	115	60	11.67	40.8	14.1	20
CAB18RCB	18,000	115	60	TBD	TBD	TBD	TBD
¹ Amps will va approximatel	y 50% highe	r in the heat	ting mode	·	e and inlet ai	r temperature	e. Amps may be

²MCA = Minimum Circuit Ampacity (Wire Size Amps)

Performance/Electrical Data for Split System Condensing Section Models CAB, (208/230V, 60 Hz, R-410A Refrigerant)

		//						1
	Nominal		_		Run	Unit		
Basic	Capacity	Voltage	Freq.		Amps	Starting		Maximum Fuse/
Model	(BTUH)	(VAC)	(Hz.)	Phase	Cooling ¹	Amps ¹	MCA ²	Breaker Size
CAB05RCA	5,000	208/230	60	1	2.20	7.70	4.3	10
CAB07RCA	7,000	208/230	60	1	2.91	10.2	5.1	10
CAB10RCA	10,000	208/230	60	1	3.42	12.0	6.0	10
CAB12RCA	12,000	208/230	60	1	5.24	18.3	6.9	10
CAB16RCA	16,000	208/230	60	1	4.94	17.3	8.7	15
CAB18RCA	18,000	208/230	60	1	TBD	TBD	TBD	TBD
CAB24RCA	24,000	208/230	60	1	6.96	24.4	17.7	30
¹ Amps will va	ry with actua	l voltage, ir	nlet wate	r temper	ature and i	nlet air tem	perature.	Amps may be
approximatel	ly 50% highe	r in the hea	iting mod	de				
² MCA = Minin	num Circuit A	mpacity (W	ire Size	Amps)				

Performance/Electrical Data for Split System Condensing Section Models CAB, (220/240V, 50 Hz, R-410A Refrigerant)

	Nominal Capacity	Voltage	Freq.		Run Amps	Unit Starting		Maximum Fuse/
Basic Model	(BTUH)	(VAC)	(Hz.)	Phase	Cooling ¹	Amps ¹	MCA ²	Breaker Size
CAB05RCF	5,000	220/240	50	1	2.45	8.60	4.8	10
CAB07RCF	7,000	220/240	50	1	2.83	9.90	5.2	10
CAB10RCF	10,000	220/240	50	1	3.37	11.8	5.4	10
CAB12RCF	12,000	220/240	50	1	TBD	TBD	TBD	TBD
CAB16RCF	16,000	220/240	50	1	TBD	TBD	TBD	TBD
CAB24RCF	24,000	220/240	50	1	8.26	28.9	16.5	25
¹ Amps will vary with actual voltage, inlet water temperature and inlet air temperature. Amps may be approximately 50% higher in the heating mode ² MCA = Minimum Circuit Ampacity (Wire Size Amps)								

Electrical Data - Model DEAH, 50 Hz


					Air Flow	Weight
Unit	Capacity (BTUH)	Volts	Freq. (Hz.)	Full Load Amps ³	(m ³ /hr)	(kg)
DEAH07RCF	7,000	240	50	0.44	360	10
DEAH10RCF	10,000	240	50	0.58	495	11
DEAH12RCF	12,000	240	50	0.58	495	12
DEAH16RCF	16,000	240	50	0.86	580	12
DEAH24RCF	24,000	240	50	0.86	968	20
F = 220/240V	/					

				Full Load		Weight
Unit	Capacity (BTUH)	Volts	Freq. (Hz.)	Amps ³	Air Flow (CFM)	(Lbs/kg)
DEAH07RCB	7,000	115	60	0.85	250	22/10
DEAH07RCA	7,000	230	60	0.44	250	22/10
DEAH10RCB	10,000	115	60	1.14	300	25/11
DEAH10RCA	10,000	230	60	0.58	300	25/11
DEAH12RCB	12,000	115	60	1.14	360	26/12
DEAH12RCA	12,000	230	60	0.58	360	26/12
DEAH16RCB	16,000	115	60	1.75	385	27/12
DEAH16RCA	16,000	230	60	0.86	385	27/12
DEAH18RCB	18,000	115	60	1.95	400	27/12
DEAH18RCA	18,000	230	60	0.94	400	27/12
DEAH24RCA	24,000	230	60	0.86	700	44/20
B = 115V A =	230V					

Electrical Data - Model DEAH, 60 Hz

³ Amps will vary with actual voltage.


Split System Air Handler Models 07-10-12-16-18 Dimensional Data (inches/mm) & Weight (lbs/kg)

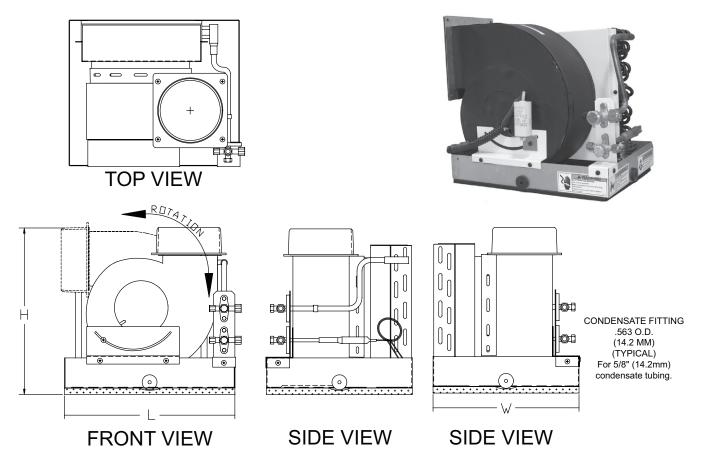


	Dim	Dimensions - inches(mm)							
Model	н	L	w	Weight Lbs(kg)					
DEAH07RC	11.50 (292)	12.88 (327)	11.03 (280)	22 (10)					
DEAH10RC	13.50 (343)	14.88 (378)	11.03 (280)	25 (11)					
DEAH12RC	13.50 (343)	14.88 (378)	11.03 (280)	26 (12)					
DEAH16RC	13.50 (343)	15.38 (391)	11.03 (280)	27 (12)					
DEAH18RC	13.50 (343)	15.38 (391)	11.03 (280)	27 (12)					

Note: 18,000 BTUH models are only available with 60 Hz units.

Split System Condensing Section Models 07-10-12-16-18 Dimensional Data (inches/mm) & Weight (lbs/kg)

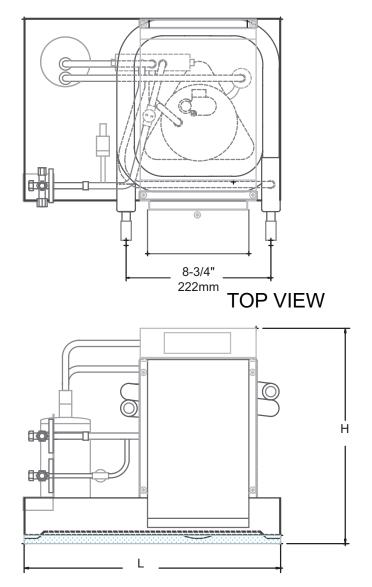



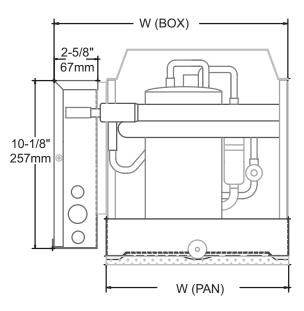

FRONT VIEW


SIDE VIEW

	Dimensions - inches (mm)				Weight
Model	Н	L	W (Pan)	W (Box)	Lbs(kg)
07	13.13 (333)	15.50(394)	11.03 (280)	14.28(363)	39 (18)
10	13.13 (333)	15.50(394)	11.03 (280)	14.28(363)	45 (20)
12	13.13 (333)	15.50(394)	11.03 (280)	14.28(363)	47 (21)
16	13.13 (333)	15.50 (394)	11.03 (280)	14.28(363)	47 (21)
18	13.13 (333)	15.50 (394)	11.03 (280)	14.28 (363)	48 (22)


Unit Capacity	Refrigerant Conn. (Male Flare) - in(mm)		
(Btu/Hr)	Liquid	Suction	
7,000	1/4" (6.35)	3/8" (9.525)	
10,000	1/4" (6.35)	3/8" (9.525)	
12,000	1/4" (6.35)	3/8" (9.525)	
16,000	1/4" (6.35)	1/2" (12.7)	
18,000	1/4" (6.35)	1/2" (12.7)	


Note: 18,000 BTUH models are only available with 60 Hz units.


Split System Condensing Section Model 24 Dimensional Data (in./mm)

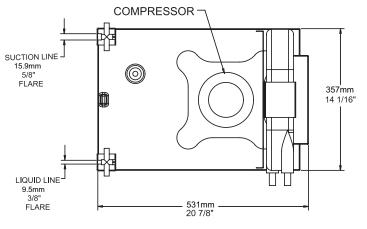

TOP VIEW

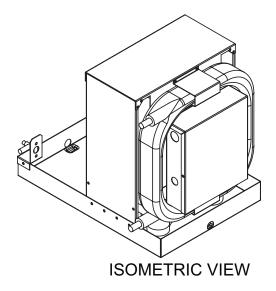

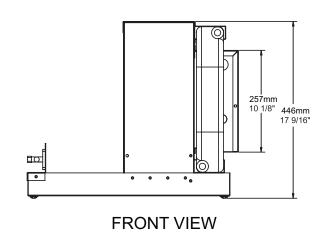

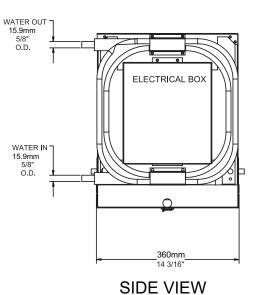


WEIGHT: 79 LBS / 36 KG

Self Contained_Split PD 1/10-10



Split System Air Handler Section Model 24 Dimensional Data (in./mm)

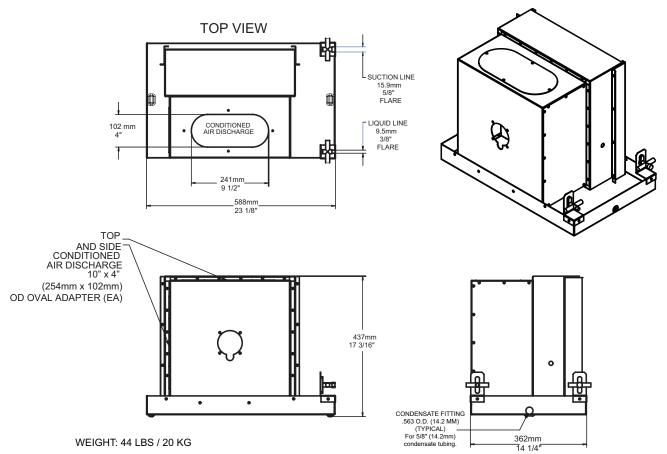

NOTE: There are two conditioned air outlet openings, one on the top and one on the right side. Each opening is a 9-7/8" x 4" (251mm x 102mm) oval opening. An oval adapter, Marvair part number 91568, should be used as a transition to duct on each opening. This adapter has an outside diameter of 10" x 4" (254 mm x 102 mm). For optimum performance, Marvair strongly recommends that both openings be used.

Please consult the Marvair[®] website at www.marvair.com for the latest product literature. Complete installation instructions are in the SeaMach^m Installation and Service Manual. Detailed dimensional data is available upon request. A complete warranty statement can be found in each product's Owner's Manual, on our website or by contacting Marvair at 229-273-3636. As part of the Marvair continuous improvement program, specifications are subject to change without notice.





Marvair Marine UK Unit B8 • Arena Business Centre • Holyrood Close Poole, Dorset BH17 7FL. +44 1202 606405 www.marvair.co.uk